







#### • REMOVE SEAT AND LEFT PLASTIC COVER

For Seat use the Key and lift the seat up To remove the cover releses 2 Bolts Route the Harness from back to front on the left side

HARNESS Routing


• REMOVE PLASTIC COVER on LEFT

• CONNECT CRANK SIGNAL, IGNITION







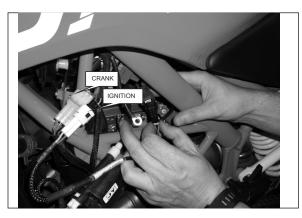




### • GND CONNECTION

**INJECTOR CONNECTION** 

On Left side Connect to INJECTOR




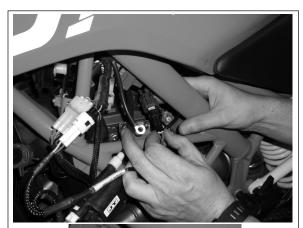





Route 3 Pin Connecotr to Throttle on Right side

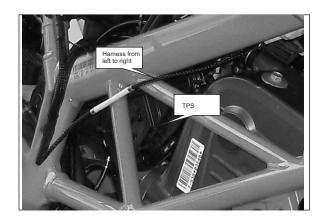









## WARNING / ACHTUNG



Fix the Harness and Connectors with zip tie

Fix All Wires

Connect the ECU